



CONNECT AND OPERATE

- 1) Connect the HDMI input sources such as: HD-DVD,PS3,STB etc.) into Sender Unit .
- 2) Connect two CAT-5E cables to both the outputs of Sender Unit and inputs of Receiver Unit
- 3) Connect the HDMI output (such as : HD-LCD、 HD-DLP)into Receiver Unit.
- 4) Plug the power into Receiver Unit.